


Installation Guide

Novaneon Pivot 0712




WARNING: Risk of electrical shock. Please read these instructions completely and carefully. Disconnect power before servicing or installing product.


- 1** Cut material to length required using Novaneon Shears (cut only at intervals marked on the side of the casing).

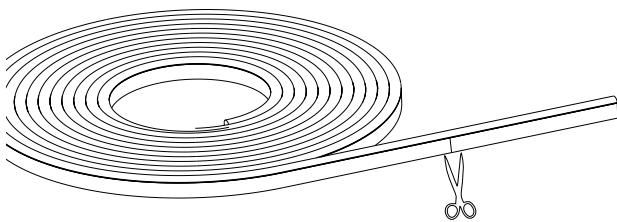


- 2** Install clear PC terminals to both ends of Novaneon to prevent glue leaking to LED units.

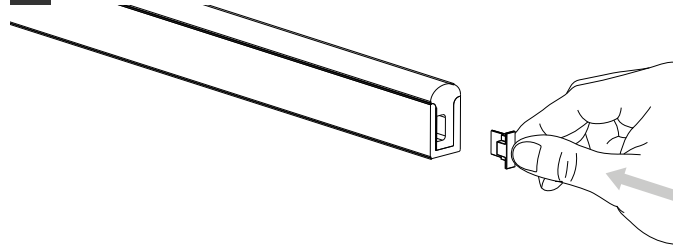


- 3 Choose Left or Right Side Connect and Insert Contact Strip:**
Insert Contact strip into cut end of Novaneon. Where the PCB is on the left side of the strip, use a left connector, where it is on the right side, use a right connector.

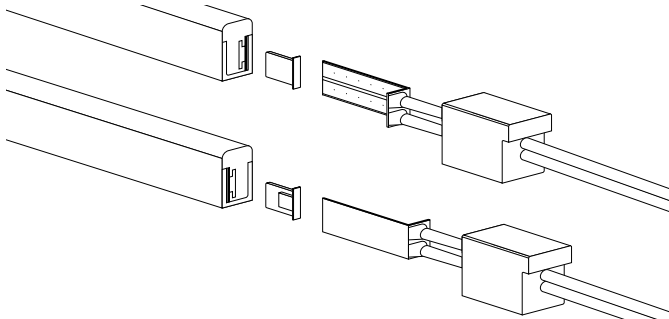

- 5 Install End Caps:**
Apply silicone glue to cut end of strip, and slide end cap over. Clean up excess silicone with a clean cloth. Silicone will cure in 4 hours.

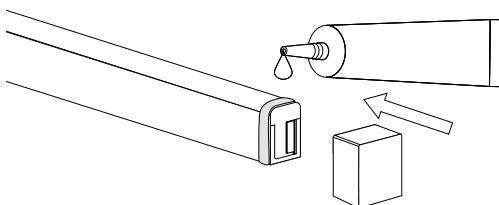

- 4 Slide Cover Over to Seal:**
Apply silicone glue to cut end of strip, and slide cover over. Also spread silicone to area near wire holes to fully seal. Clean up excess silicone with a clean cloth. Silicone will cure in 4 hours.

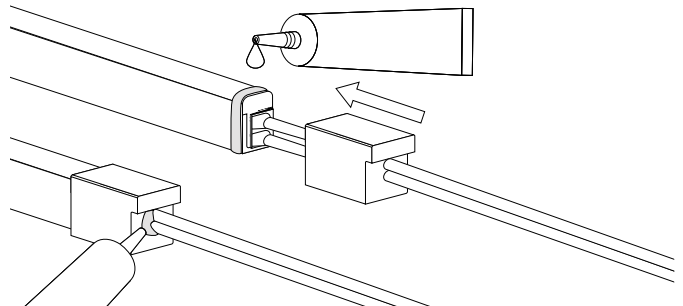

- 6** Novaneon strip can be mounted using supplied clear clips. When handling strip, take care to only bend horizontally and do not twist/stretch strip as this may damage internal components.

