



Pivot 0712 12V

- 1 Components required:** These items are required for installation, cutting shears sold separately.


L to R: End Cap, Terminal Insert, Silicone Glue, Cutting Shears, Wiring Connector

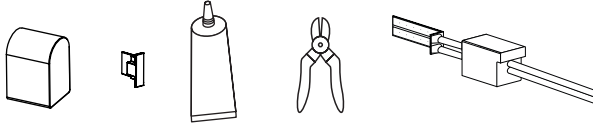


- 2** Measure the Neonflex to the required length, then trim at the closest cutting mark using your shears.

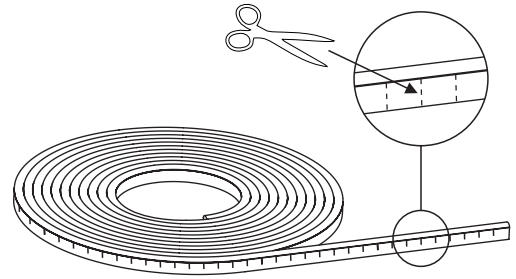


- 3** Install clear PC terminals to both ends of Novaneon to prevent glue leaking to LED units.

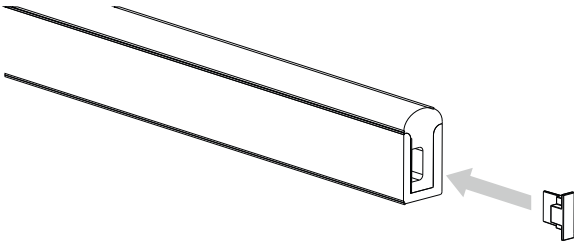


- 4 Choose LHS or RHS Connector** and insert contact strip. Insert Contact strip into cut end of Novaneon. Where the PCB is on the left side of the strip, use a left connector, where it is on the right side, use a right connector.

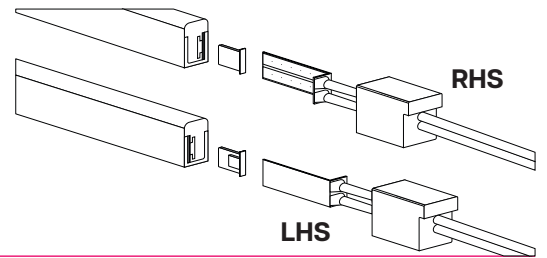


- 5 Slide Cover Over to Seal.** Apply silicone glue to cut end of strip, and slide cover over. Clean up excess silicone with a clean cloth. Silicone will cure in 4 hours.

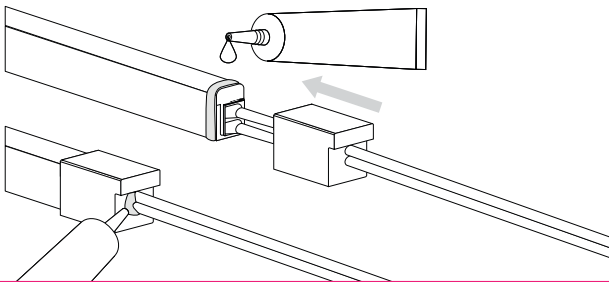


- 6 Install End Caps.** Apply silicone glue to cut end of strip, and slide end cap over. Clean up excess silicone with a clean cloth. Silicone will cure in 4 hours.

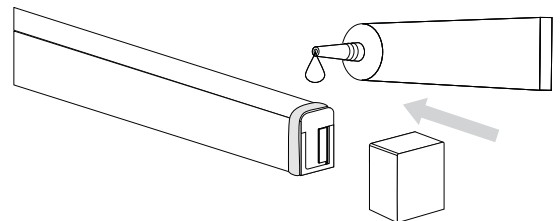

- 7** Mounting options available:

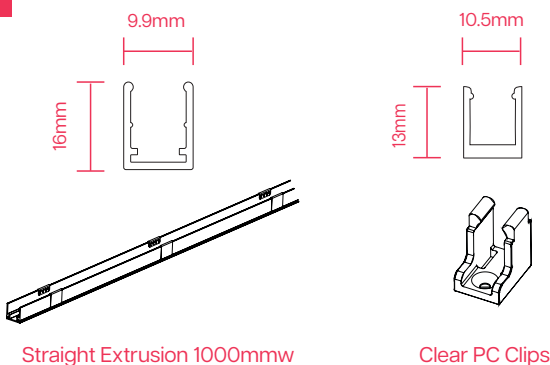

- 8** This product has a horizontal bend. Avoid twisting during installation.

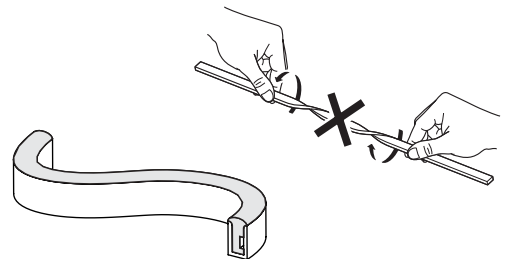

Sales & Support

PH 02 9517 3222 | E sales@bounced.com.au
www.bounced.com