


Installation Guide

SupaCOB Premium White & Colour



WARNING: Risk of electrical shock. Please read these instructions completely and carefully. Disconnect power before servicing or installing product.

- 1** Measure and cut COB strip to required length. SupaCOB Premium White - cut anywhere. SupaCOB Premium Colours - cuttable every 50mm.

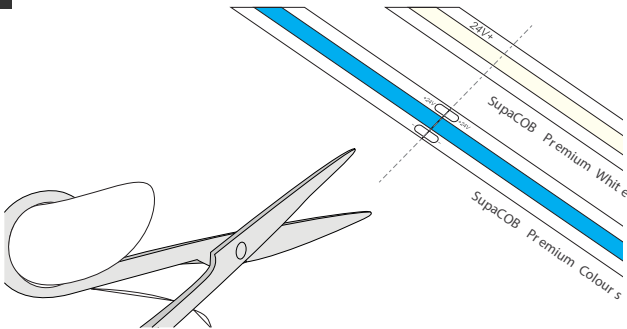


- 3** Insert COB strip(s) into the plastic connector slot(s) ensuring the correct polarities are aligned:

Type A: Strip to Strip Clip




Type B: Strip to Wire Connector



Type C: Strip to Strip Wire Connector



Type D: Strip to Strip L Connector

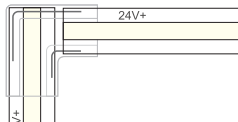

- 2** If required, select appropriate connector:

Type A: Strip to Strip Clip



Type B: Strip to Wire Connector




Type C: Strip to Strip Wire Connector




Type D: Strip to Strip L Connector



- 4** Once COB strip is inserted, use flat pliers to compress metal connectors into the plastic connector. When completed correctly, metal should sit flush in the plastic connector. (Test power connection before installation.)

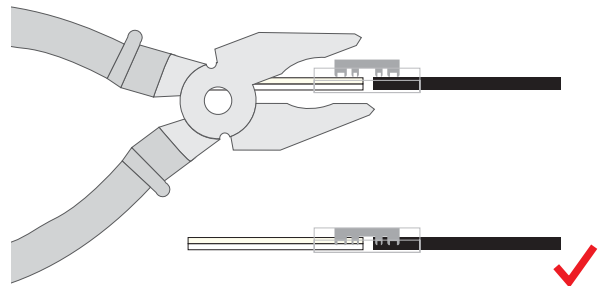

- 5** Remove the d/s tape paper backing and install into Superchannel or intended surface. Ensure COB strip is stuck down flat and firmly.

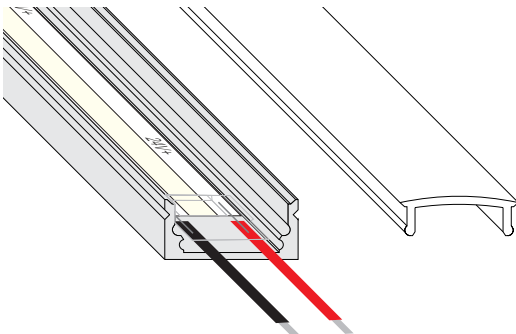

- 6** Connect to appropriately sized transformer.

