Installation Guide


SupaCOB Premium RGB



WARNING: Risk of electrical shock. Please read these instructions completely and carefully. Disconnect power before servicing or installing product.

Measure and cut COB strip to required length. SupaCOB Premium RGB is cuttable every 31.3mm.

Insert COB strip(s) into the plastic connector slot(s) ensuring the correct polarities are aligned: Positive (+) to Positive (+), Red (-) to Red (-),

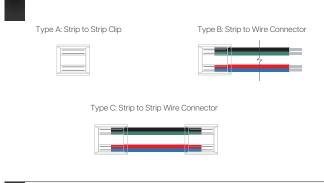


If required, select appropriate connector:

Type A: Strip to Strip Clip


Type B: Strip to Wire Connector

Type C: Strip to Strip Wire Connector

Once COB strip is inserted, use flat pliers to compress metal connectors into the plastic connector. When completed correctly, metal should sit flush in the plastic connector. (Test power connection before installation.)

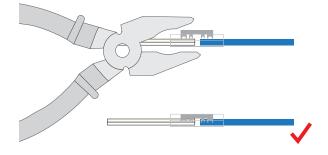

Remove the d/s tape paper backing and install into Superchannel or intended surface. Ensure COB strip is stuck down flat and firmly.

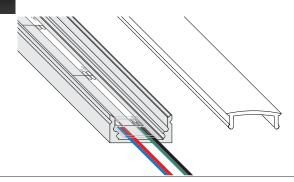

6 Connect to appropriate RGB Controller and transformer.

