


Installation Guide

SupaCOB Premium RGBWW




WARNING: Risk of electrical shock. Please read these instructions completely and carefully. Disconnect power before servicing or installing product.

- 1 Measure and cut COB strip to required length. SupaCOB Premium RGBW is cuttable every 62.5mm.

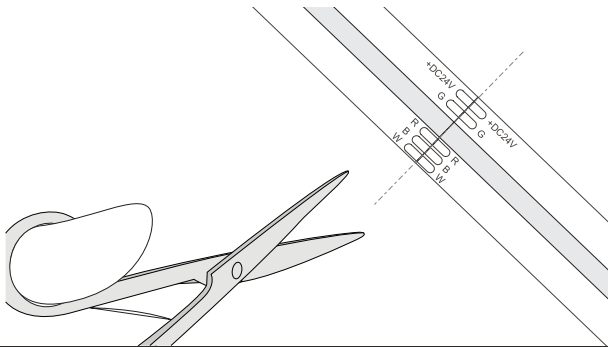


- 3 Insert COB strip(s) into the plastic connector slot(s) ensuring the correct polarities are aligned: Positive (+) to Positive (+), Red (-) to Red (-), Green (-) to Green (-), Blue (-) to Blue (-) and White (-) to White (-)

Type A: Strip to Strip Clip

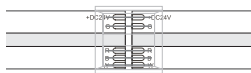


Type B: Strip to Wire Connector

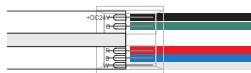

Type C: Strip to Strip Wire Connector



- 5 Remove the d/s tape paper backing and install into Superchannel or intended surface. Ensure COB strip is stuck down flat and firmly.

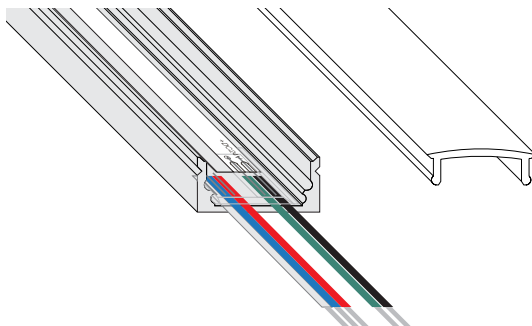


- 2 If required, select appropriate connector:

Type A: Strip to Strip Clip




Type B: Strip to Wire Connector

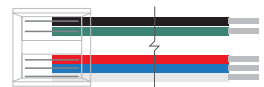

Type C: Strip to Strip Wire Connector



- 4 Once COB strip is inserted, use flat pliers to compress metal connectors into the plastic connector. When completed correctly, metal should sit flush in the plastic connector. (Test power connection before installation.)

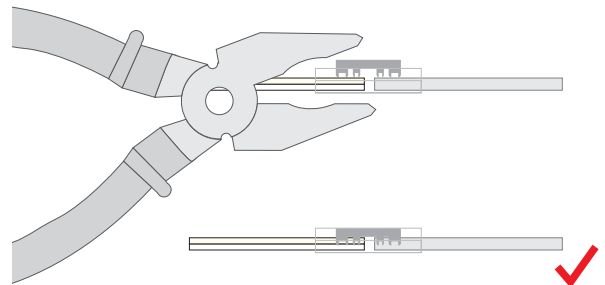

- 6 Connect to appropriate RGBW Controller and transformer.

