



Cobra IP67


- 1 Cut LED strip to required size, taking care to only cut at intervals marked on the product. Note the maximum series length to avoid voltage drop.

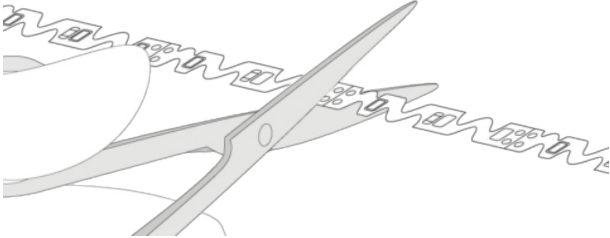


- 2 Ensure that your channel letter or application area is clean and free of debris. Remove adhesive liner from the back of strip and press flex strip into place.

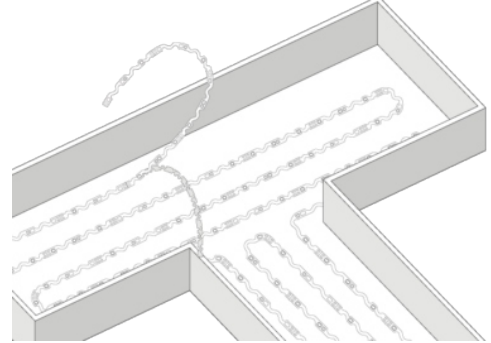

- 3 Solder connecting 'wire tails' to terminals for connection to power supply, or for 'bridging wires' for linking of strip segments. Always ensure positive-positive and negative-negative connection.

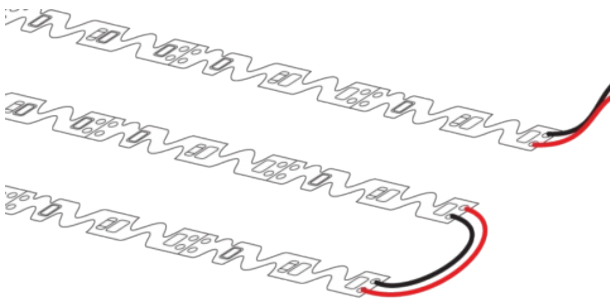

- 4 Connect to suitable power supply (and dimmer /controller if required) and test.

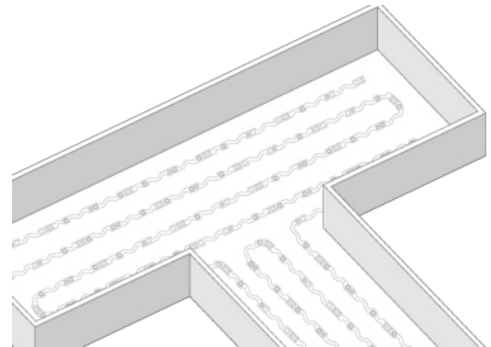

Sales & Support

PH 02 9517 3222 | E sales@bounced.com.au
www.bounced.com